

User Guide

MOKI X-TERRAIN

Wireless Speaker

Waterproof & Rock Solid



About/Contents	04
Overview	05
Recharge	07
Pair to Bluetooth	08
Play via 3.5mm cable	09
Technical Specifications	09

MOKI X-TERRAIN WIRELESS SPEAKER

Thank you for purchasing the X-Terrain. This tough & rugged, wireless pocket speaker from Moki is designed to keep your tunes pumping no matter where you are or what elements you face. Waterproof and shock resistant, Moki X-Terrain delivers an awesome sound while still fitting in the palm of your hand. A powerful yet efficient 5W main speaker produces a sound output that must be heard to be believed while a lightweight strap lets you attach the X-Terrain to almost anything, giving you music on the go and the ability to safely take handsfree calls.

CONTENTS

- X-Terrain Wireless Speaker
- Hand Strap
- Recharge Cable - 3.5 mm to USB
- Audio Cable - 3.5 mm to 3.5 mm
- User Guide

OVERVIEW

A - ON / OFF

B - LED, ON / OFF / Mode control

 
C - Track Forward / Volume Up

D - Track Reverse / Volume Down





E - LINE-IN / Recharge

F - Reset Button

TOP

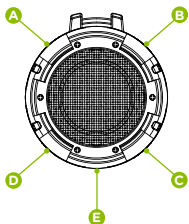

BASE

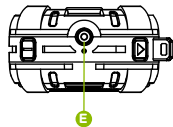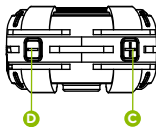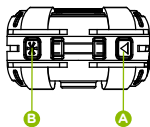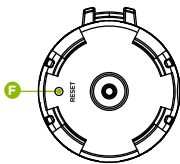    

OVERVIEW (continued)

A - ON/OFF & PLAY/PAUSE

Hold button for 2 seconds to turn speaker ON. Hold again to turn off. If no Bluetooth device connects the Moki X-Terrain will automatically turn off in 3 minutes. To play music, tap once; to pause music, tap again.

B - LED Mode (*)

The inbuilt LEDs can be set to flash with the beat of the music being played, cycle through colours in “breathe” mode or turned OFF. Tap button once to cycle through to each mode.

C - SKIP FORWARD & VOLUME UP (+)

Tap to skip forward to next song. Press and hold to increase volume to desired level.

D - SKIP BACK & VOLUME DOWN (-)

Tap button once to restart current song, quickly tap again to play previous song. Press & hold button for 3-4 seconds until volume is at desired level.

E - LINE IN & RECHARGE PORT

The 3.5mm port functions as a line-in for devices without Bluetooth. If X-Terrain does not auto connect when 3.5mm cable is inserted, press & hold **A** to change to line-in mode. Recharge through 3.5mm port via USB when the internal battery is flat.

OVERVIEW (continued)

F - RESET

Pressing the Reset Button will wipe all previous Bluetooth connections and restart the X-Terrain.

RECHARGE

1) To recharge the Moki X-Terrain, use the supplied USB to 3.5mm cable.

2) Insert the 3.5mm plug into the the jack on the X-terrain (See location **E** in the overview)

3) Insert the USB plug to a port on a PC or USB charge adaptor.

An LED behind the charge port will glow red while X-Terrain is recharging and turn off automatically when fully charged. Charge time will take up to 3-4 hours.

PAIR TO BLUETOOTH

- 1) To play audio wirelessly, the X-Terrain must be paired with a Bluetooth enabled play device.
- 2) With NO cable connected, turn on the X-Terrain - it will automatically enter pairing mode (LED will blink RED / BLUE).
- 3) On your play device, turn Bluetooth ON and “Scan for devices” if required.
- 4) Select “Moki X-Terrain” which should appear under “Available devices”.
- 5) Once selected, pairing will start and the LED will flash RED / BLUE. When pairing is successful, the LED will glow solid BLUE.

Note:

The X-Terrain will scan for new *Bluetooth* devices or will reconnect to the last paired device if it is close by. You may be required to enter passkey “0000” if requested depending on the *Bluetooth* version of your device.



PLAY VIA 3.5mm CABLE

- 1) To play music via 3.5mm cable insert cable to the 3.5mm socket on the X-Terrain.
- 2) Attach the other end to the headphone socket on your audio player.
- 3) Hold the (*) button for one second to switch between cable and Bluetooth mode.

Note:

When the 3.5mm cable is inserted, Bluetooth controls will not function Adjust volume & track control from your play device only.

TECHNICAL SPECIFICATIONS

Model # : ACC MATSP

Bluetooth : V4.2 / 2.4GHz

Distance : 10m / Class 2

Speaker Driver : 5W /85dB

Frequency Response : 100Hz - 20kHz

Play Time (approx) : 8 hours

Dimensions (mm) : Ø90 x 52



mokiinternational.com

Moki International all rights reserved

Made in China



The *Bluetooth*[®] word mark and logos are registered trademarks owned by *Bluetooth*[®] SIG, Inc. and any use of such marks by Moki is under license. Other trademarks and trade names are those of their respective owners.